



Apex Canopy Porch Fitting Instructions


Important Information

All components should be inspected BEFORE installation commences for any damage and to check all your items are correct before installation. While care is taken to match our engineered timber products, timber is a natural product where the colour, grain structure, can vary.

While we do everything possible to ensure the information contained within these fitting instructions are correct, they are only a general guide, every situation is different. Please read through the fitting instruction fully before commencing any fitting, Cheshire Mouldings will not be held responsible for any mistakes made through incorrect fitting. You will need to take extra care when installing pre-finished components and some touching up will undoubtedly be necessary around the cut areas.

Components

A - x2		G - x2		M - x6	
B - x2		H - x6		N - x2	
C - x2		I - x1		O - x18	
D - x1		J - x1		P - x6	
E - x1		K - x1		Q - x2	
F - x2		L - x4			

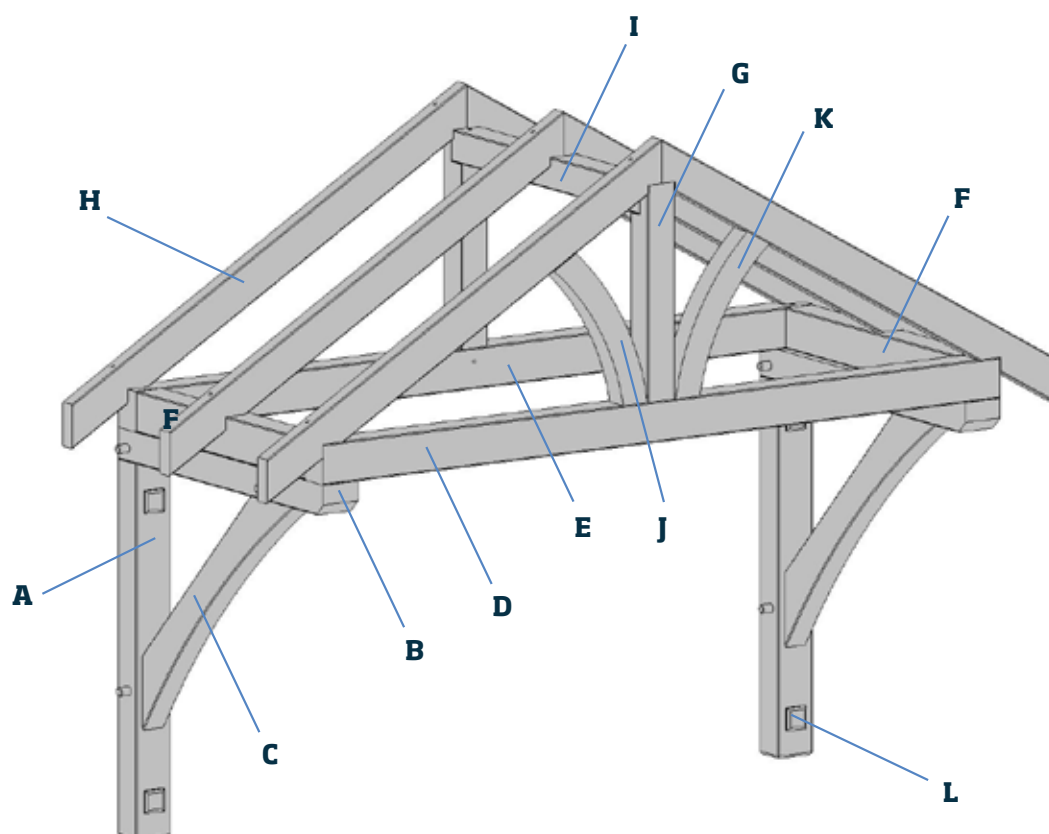

Fitting Instructions

Measure and mark gallows bracket positions on the wall to a maximum internal span of 1200mm for PORCH001 & 1600mm for PORCH002 (**Fig 1**).

Note: Cheshire mouldings Porch Canopies do allow for adjustability of the upright position to less than max span, taking into account any unique features around the door.

Measure and mark the back plate at the preferred location above the door (**Fig 2**).

Assemble the Gallows Brackets using exterior grade wood glue.

Knock the 15mm diameter dowels supplied into the pre-machined draw-bored tenons (**Fig 3**).

Place and secure the assembled Gallows Brackets to either side of the door to the marked positions on the wall. Fix using 2 x 12mm steel bolts (not supplied). Glue the cover caps to hide fixings (**Fig 4**).

Assemble the 4 parts of the Porch Canopy frame together by gluing the tenons and using the 45mm screws supplied (**Fig 5**).

Place the canopy frame on top of the Gallows Brackets checking that the frame is central and the 2 x holes are at the front. Pilot drill through frame and into the Gallows Brackets. Fix using the 100mm screws supplied (**Fig 6**).

Glue the tenons of the front and back King Posts. Use the 45mm screws supplied to secure, countersink and fill (**Fig 7**).

Screw the top beam to the front and back King Post using 100mm screw supplied (**Fig 8**).

Fig.1

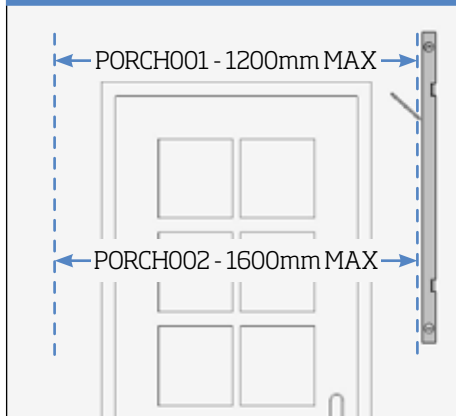


Fig.2

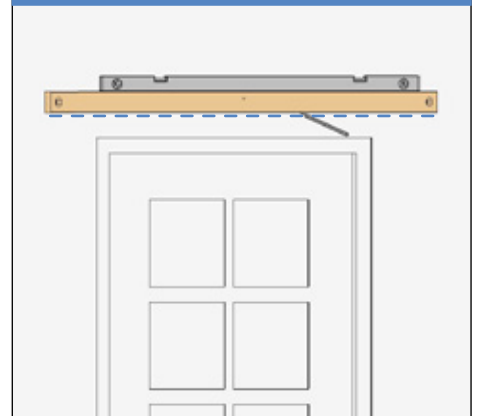


Fig.3

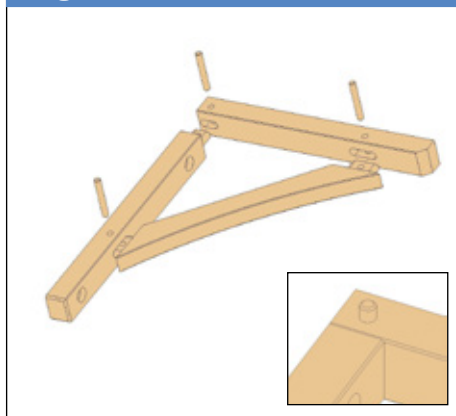


Fig.4

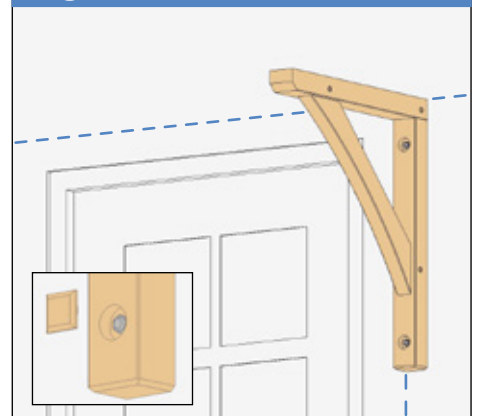


Fig.5

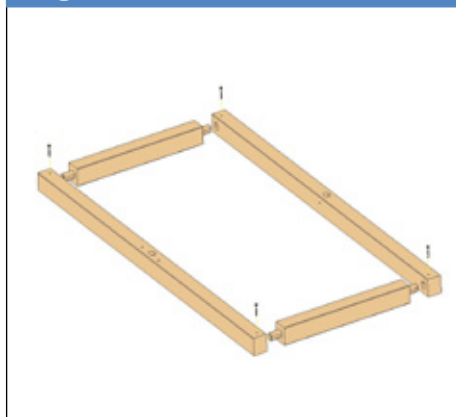


Fig.6


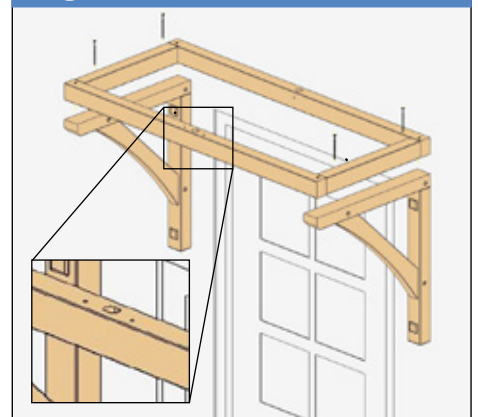


Fig.7



Fig.8

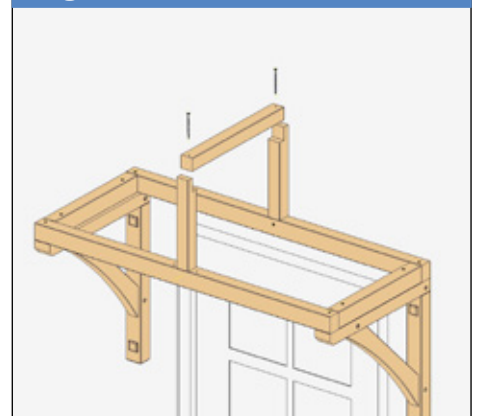

Position and attach the rafters to the top beam and canopy frame using the 100mm screws supplied (**Fig 9**).

Glue the 30mm timber dowels into the bottom of the Rams Horns and fix into front purlin. Loosen the front rafters, if necessary, for ease of fit (**Fig 10**).

Drill pilot hole through half lap on Rams Horns and fix to front rafters using 25mm screws supplied (**Fig 11**).


Fig.9



Fig.10



Fig.11

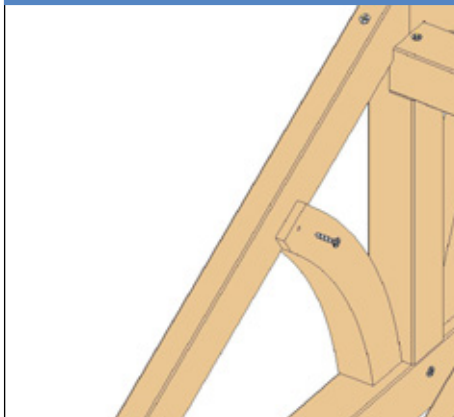

Info

- Canopy tested to hold a weight loading of 50kg/m².
- Maintenance - we recommend that you retreat your Porch Canopy and Accessories Kits annually by cleaning and repainting, staining or varnishing, always following the manufacturer's recommendations.
- Fascias, roofing, finishing components, exterior glue and wall fixings are not included.

Download our Interactive **Wall Panel Collection Brochure**

Includes lots of new Clickable content



Sign up for our **New Trade App**



Check out our huge **PRODUCT RANGE**

We supply more than you think



www.cheshiremouldings.co.uk



Technical Helpline:
Freephone
0800 085 3475

