

WALL PANEL
SPECIALISTS




Shaker & Panel Mould Full Wall Panelling Fitting Guide

Suggested Products:


TM776 TM667 TM1065

DESIGNED BY FITTERS FOR EASY INSTALLATION


Measure length and height of area for wall panelling (**Fig 1**).

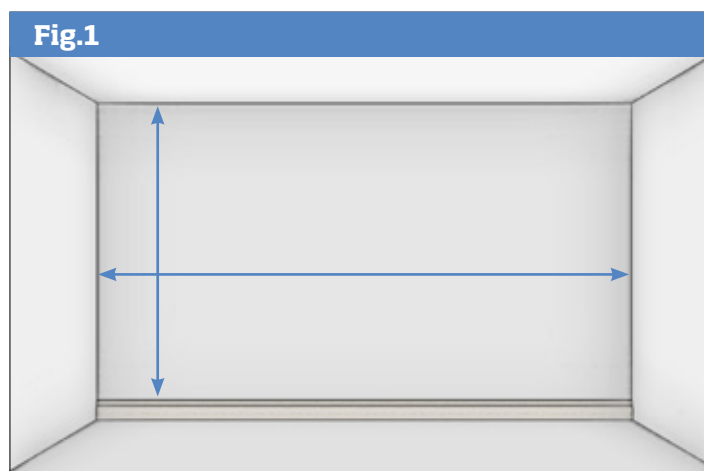

Measure, mark and cut horizontal strips for top and bottom. Apply bead of adhesive to back of panel strips and offer into position (**Fig 2**). Check level using spirit level and secure in position using nail gun. NB before proceeding, please check for any cables and pipes using a detector.

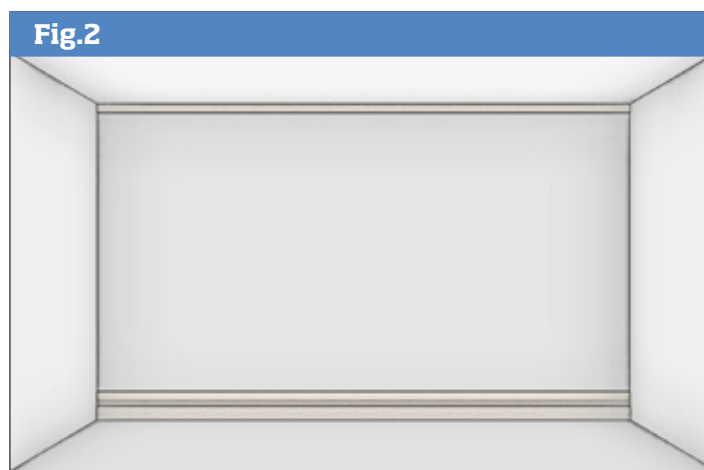


Measure, mark and cut strips for left and right sides. Check level and install as before (**Fig 3**).

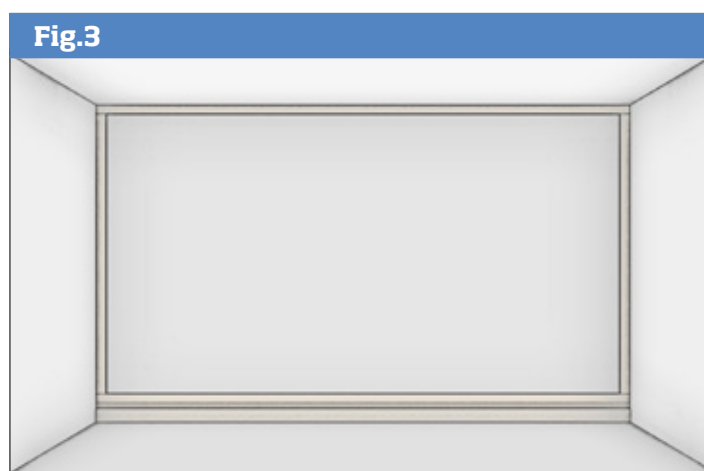

Mark centre locations of side panel strips where they join top and bottom strips. Measure distance between centres and divide by preferred number of panels going across.

Example:

- Centre distance = $3532\text{mm} \div 7 \text{ panels} = 504.5\text{mm}$ centres
- Measure and mark centres along edges of top and bottom strips (**Fig 4**).
- Measure between top and bottom strips. Cut vertical strips

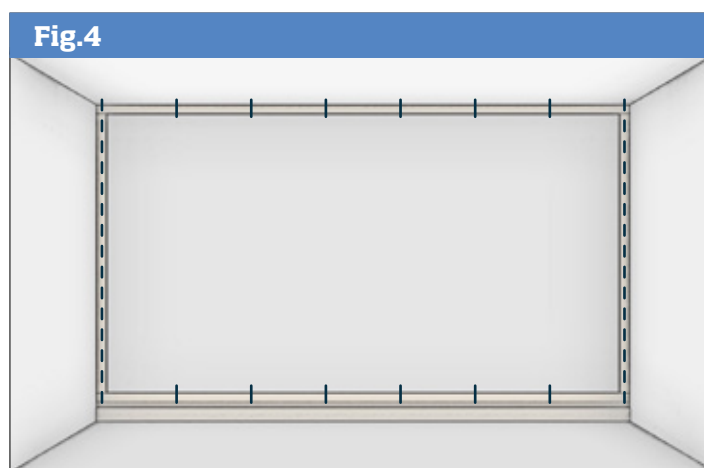


Measure and mark centres on both ends on all vertical strips.

Apply adhesive to back of strip and offer between top and bottom strips so that the vertical strip centres are aligned with the centre marks on top and bottom strips. Check square with spirit level and secure using nail gun (**Fig 5**).

Repeat for remaining vertical strips.


Measure distance between vertical strips and cut horizontal strips to length.

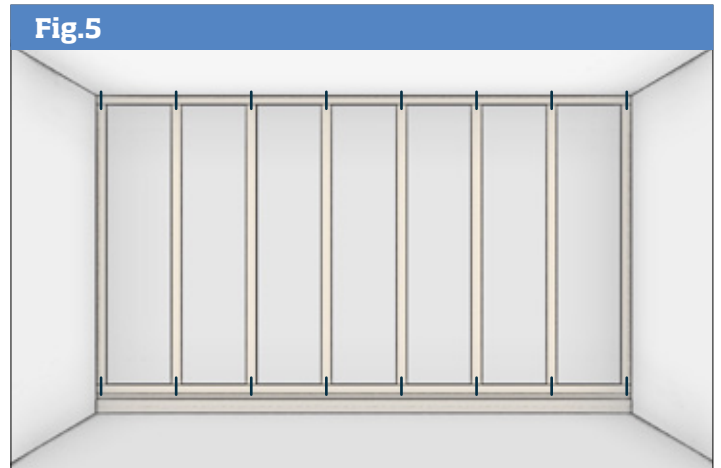


Draw horizontal line across faces of vertical strips using a straight edge and spirit level to ensure the line is level. The height of this line is down to personal preference but 900mm - 1000mm high is a good guide (**Fig 6**).

Apply adhesive to back of the short horizontal strips and offer between vertical strips so the top of the strip is aligned with horizontal line. Secure with nail gun.


Repeat for all horizontal strips.

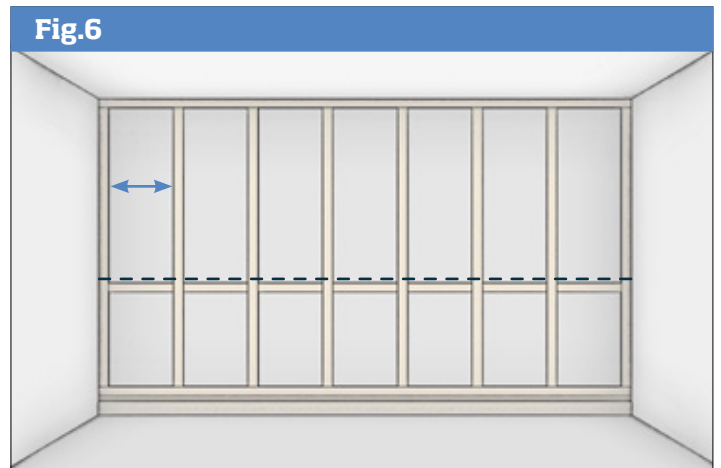

Next, measure the internal height and width of each panel square/rectangle. Cut panel moulds to length with mitred corners (**Fig 7**).

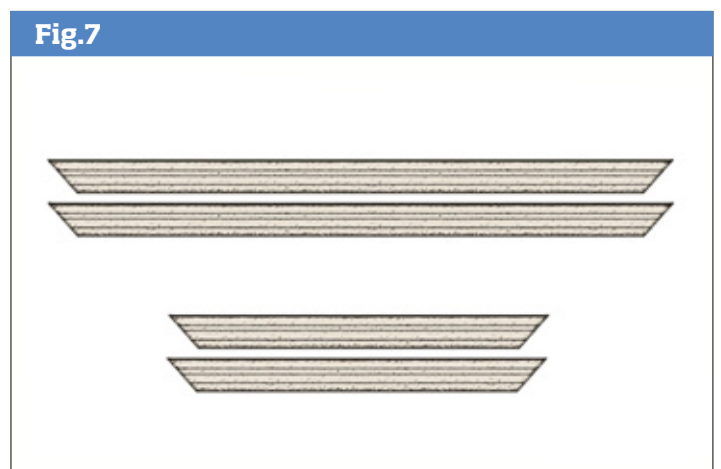

Apply adhesive to panel mould back and offer up to wall and corresponding panel edge. Pin in place to secure (**Fig 8**).

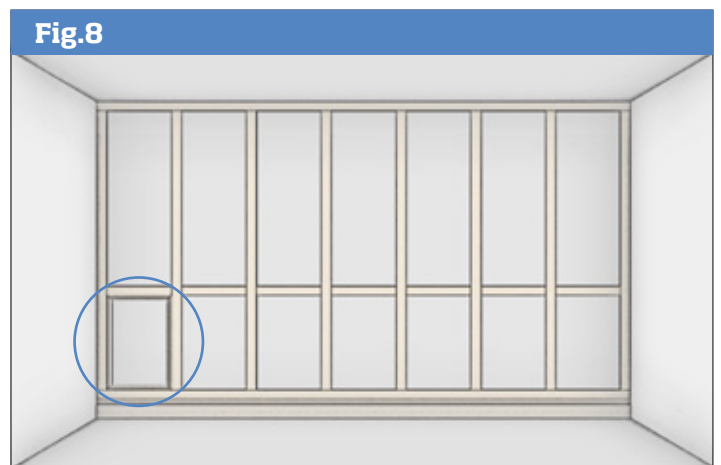

Repeat for each panel until all panel mouldings are fitted and secured (**Fig 9**).

Fill any joint gaps.

Sand to a smooth finish then you are ready to paint.



Download our Interactive **Wall Panel Collection Brochure**

Includes lots of new **Clickable content**

Interactive Version	Material	Finish	Colour	Code	Stock	Availability

Sign up for our **New Trade App**

NOW LIVE!

TRADE ONLY

Check out our huge **PRODUCT RANGE**

We supply more than you think



www.cheshiremouldings.co.uk

WALL PANEL
SPECIALISTS



Technical Helpline:
Freephone
0800 085 3475