



MDF Wall Kit (WPKT4)

Fitting
Instructions

DESIGNED BY FITTERS FOR **EASY INSTALLATION**

Important Information

The following instructions are for installing the Cheshire Mouldings - **MDF Wall Kit (WPKT4)**.

MDF Wall Kit has a coverage of approx. 1.2m².

If you have any queries please contact our technical helpline on **0800 085 3475**.

Please note:

All components should be inspected BEFORE installation commences for any damage, as Cheshire Mouldings cannot be held responsible for any damage caused during installation. We do not recommend the use of a sharp blade to open the packaging as this may damage the product

Tools required:

Tape measure, pencil, adhesive, nail gun.

Kit contents

6x 1.2m MDF Strips (97mm x 9mm)
All products unfinished




Download our Interactive
**Wall Panel
Collection Brochure**
Includes lots of new Clickable content




Sign up for our
New Trade App



Measure up from top of skirting board to your preferred panelling height. Mark position and draw horizontal line across. Check with spirit level (**Fig 1**).

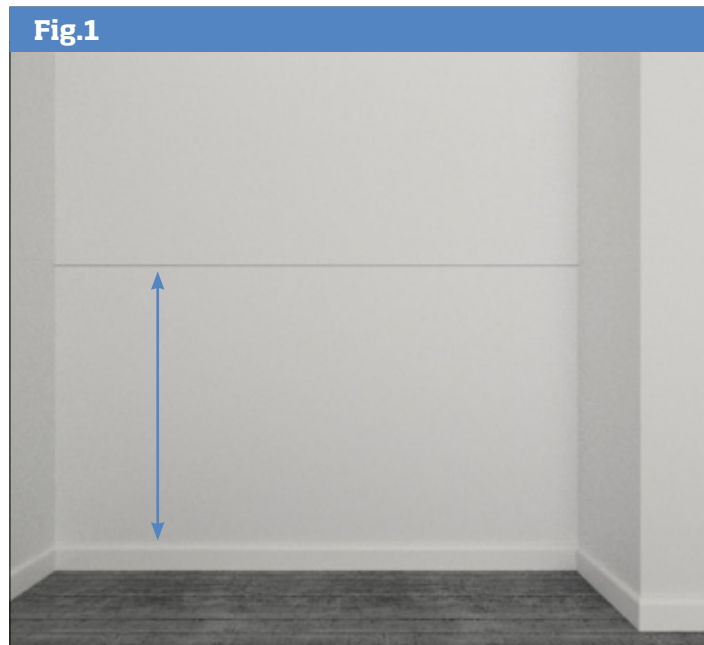

Measure length of wall. Mark and cut enough strips to run across top of skirting and across horizontal line previously drawn. Apply adhesive to backs of strips (**Fig 2**).

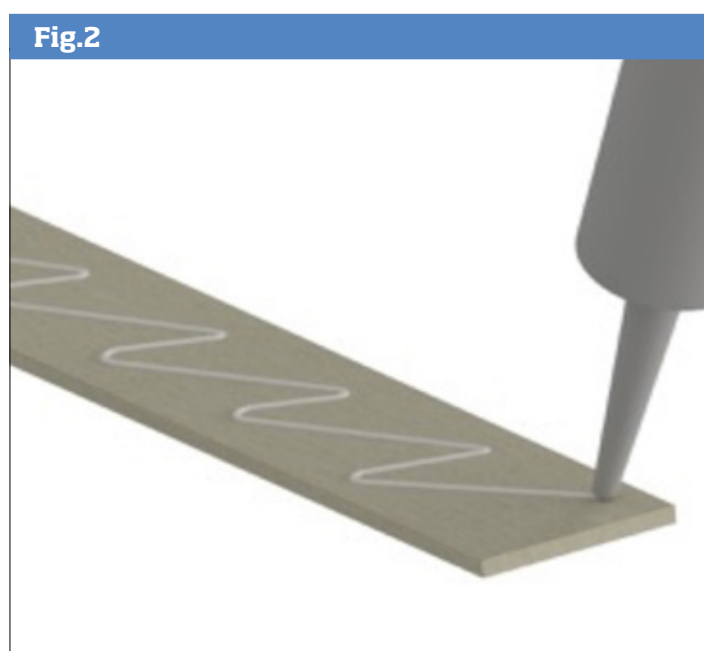

Offer strips into position and secure with nail gun (**Fig 3**).



To work out how many panels you require, measure wall length and subtract width of 1 panel strip. **(Fig 4)**.

Example:


- Wall length = 2000mm
- Width of wall panel strip = 97mm
- $2000\text{mm} - 97\text{mm} = 1903\text{mm}$
- Divide this dimension by how many panels you prefer.
In this example we are using 3 panels
- $1903\text{mm} \div 3 = 634\text{mm}$ centres
- The actual distance between panel strips will be 634mm minus width of 1 panel strip
- $634\text{mm} - 97\text{mm} = 537\text{mm}$ between strips

Fig.4



Measure distance between top and bottom strips and cut 4 vertical panel strips. Apply adhesive to back of strips. Offer 2 strips between horizontal strips, placing one of them at each end of the run. Secure with nail gun **(Fig 5)**.


Fig.5

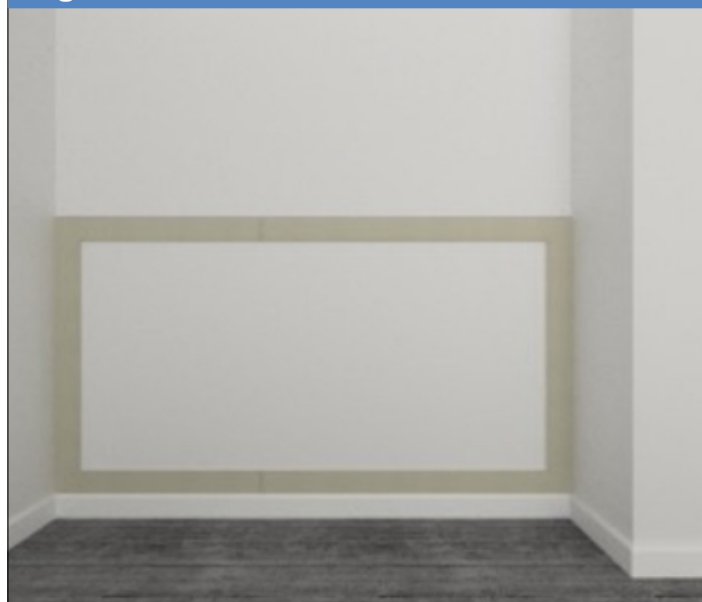

Offer remaining strips between horizontal strips and space them according to figure worked out in Fig 4 ie 537mm between strips. Secure with nail gun **(Fig 6)**.

Fill all gaps and joints with decorators caulk.
Wipe off any excess with damp cloth. Sand to a smooth finish.
You are now ready to paint.

Fig.6

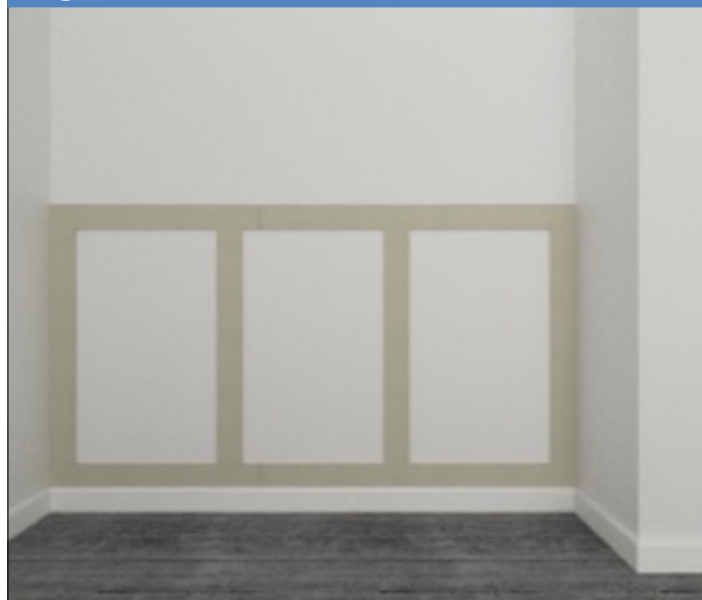

Check out our huge **PRODUCT RANGE**

We supply more than you think



www.cheshiremouldings.co.uk



Technical Helpline:
Freephone
0800 085 3475

