



WALL PANEL
SPECIALISTS



**Loose
Wall Slats**
(WPKT15, WPKT16
& WPKT17)
Fitting
Instructions

DESIGNED BY FITTERS FOR EASY INSTALLATION

Important Information

The following instructions are for installing the **Cheshire Mouldings WPKT15, 16, 17 Loose Wall Slats Kit**.

WPKT15, 16, 17 Loose Wall Slats Kits offer you the flexibility of spacing the slats to your personal preference. Whether that is closer together or further apart, the choice is yours. They also offer the added benefit of choosing the wall colour behind.

Please note

All components should be inspected BEFORE installation commences for any damage, as Cheshire Mouldings cannot be held responsible for any damage caused during installation. We do not recommend the use of a sharp blade to open the packaging as this may damage the product.

Tools required

Tape measure, pencil, adhesive, nail gun, saw & spirit level.


Preparation

Before you install, ensure that the wall is clean and smooth and remove any nails or screws etc.

If you are drilling and inserting screws into the wall or using a nail gun, we recommend that you use a pipe & cable detector first to identify and mark these locations onto the wall so you can fix around them.

Kit contains:

4x Loose slats 2.4m

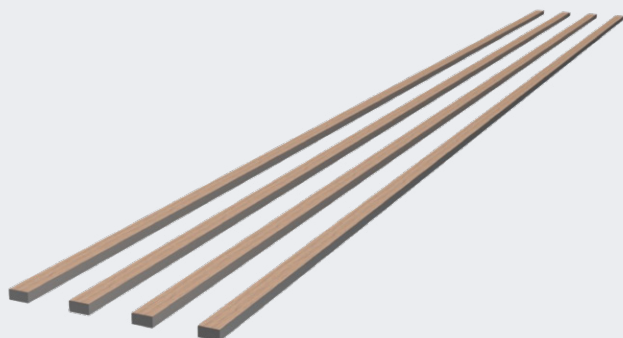

For the use of MDF panelling, we advise:

- Wherever possible, the cutting of MDF panelling should be performed outside and on a dry day, wearing a dust mask and safety glasses.
- The use of a dust mask and safety glasses when sanding MDF panelling and ensure that the area you are working in is well ventilated.
- Use a vacuum cleaner to remove any dust and wipe down the area with a damp cloth.
- Seal/paint the MDF to lock in the dust.

If you have any queries please contact our technical helpline on **0800 085 3475**.

To re-create the vertical panelling design similar to front cover picture, we used 76 slats (which equates to 19 kits) with a 14mm gap between each slat which gave a coverage length of 2950mm. Slats were cut to random lengths.

Please note - if you are considering painting the wall, it is easier to do so before the panelling is installed

To fix


Run a small bead of adhesive along back face of slat. Offer to wall and press firmly. Check square using spirit level. Fix using a nail gun (**Fig 1**).

Use a spacer to ensure the gaps between slat lengths are consistent.

Once all slats are installed, fill all nail holes using a coloured filler that matches the colour of your chosen slats.

For more complex installs, draw your preferred design onto the wall then use the design you have drawn as a template to cut the correct angles/lengths.

Fig.1

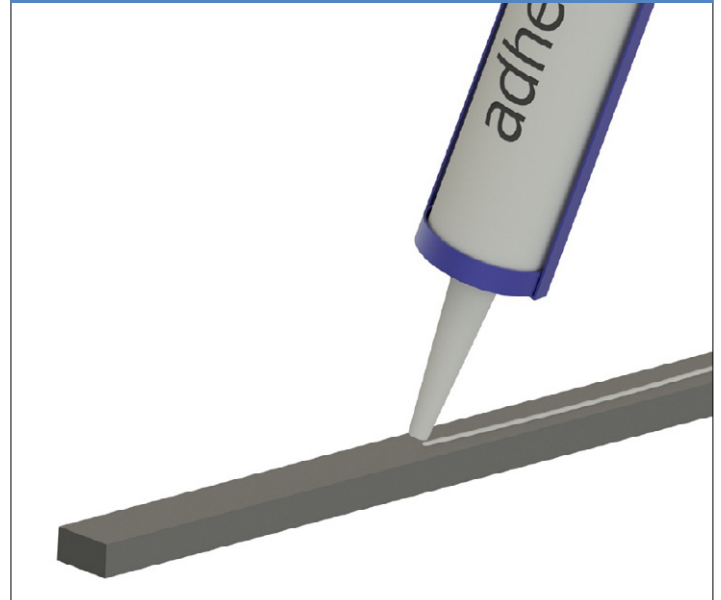

Download our Interactive **Wall Panel Collection Brochure**

Includes lots of new **Clickable content**



Sign up for our **New Trade App**



Check out our huge **PRODUCT RANGE**

We supply more than you think



www.cheshiremouldings.co.uk



Technical Helpline:
Freephone
0800 085 3475

