

Porch Finial (PORCH200) Fitting Instructions

Offer Finial up to front of installed Apex Porch so it is central to front King Post. Set height of finial, ensuring you allow enough room for the top turned section of the Finial to sit above the finished level of your chosen roofing option. Check vertical using spirit level (**Fig 1**).


Fig.1



Hold or clamp Finial in position, then drill 2 x $\varnothing 3\text{mm}$ pilot holes through the back of the King Post into the Finial, making sure you drill into the square section of the Finial (**Fig 2**).


Remove Finial and drill out the 2 x holes in the King Post using a clearance drill for $\varnothing 6\text{mm}$ x 100mm screws (not supplied).

Fig.2

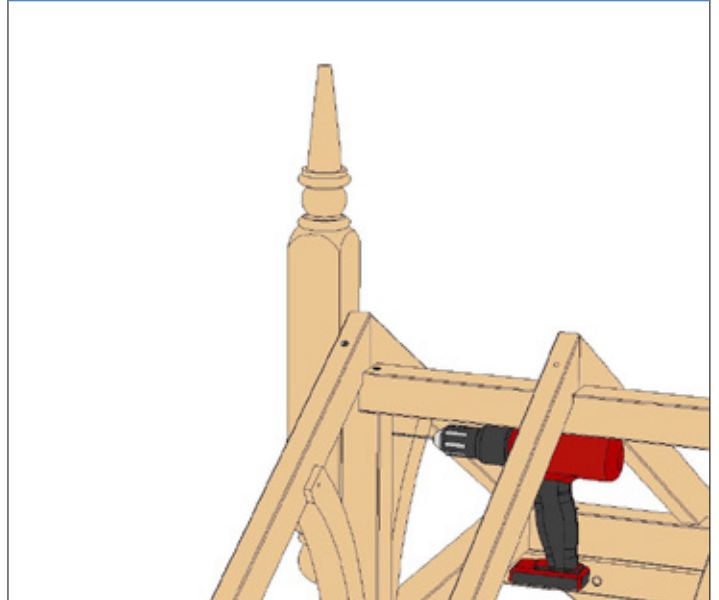

Offer Finial back into position. Insert screw through top hole and locate Finial pilot hole onto screw tip and tighten. Insert bottom screw until it locates into next pilot hole and secure (**Fig 3**).

Fig.3

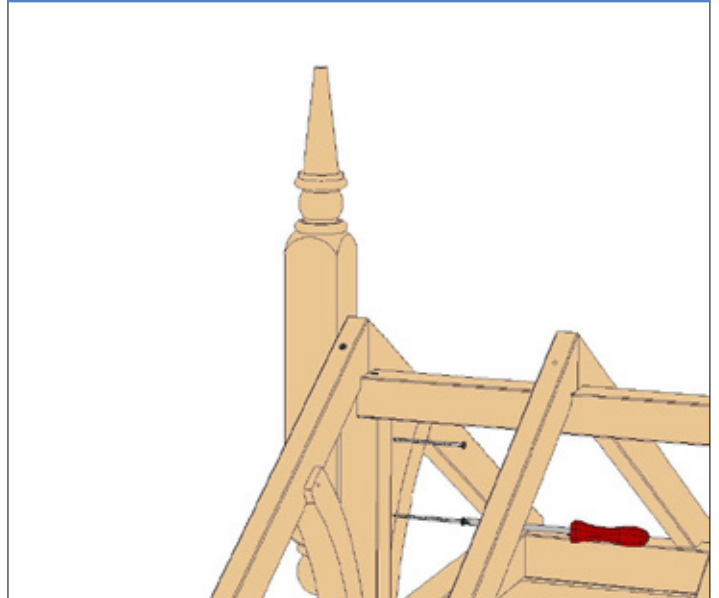

Sign up for our NEW Trade App

The App benefits from great features

- ☞ Place orders 24/7
- ☞ Search, scan and browse products from our full catalogue
- ☞ Create favourites and build shopping lists
- ☞ Check stock levels
- ☞ Receive the latest discounts and special promotions
- ☞ View your customer specific pricing
- ☞ Explore our media library
- ☞ All from your mobile or tablet device



Download our Interactive Wall Panel Collection Brochure

Includes lots of new Clickable content



Check out our huge **PRODUCT RANGE**

We supply more than you think



www.cheshiremouldings.co.uk



Technical Helpline:
Freephone
0800 085 3475