

Flexi Panel

Fitting
Instructions



WPKT23
WPKT24
WPKT25

WPKT27
WPKT28
WPKT30

DESIGNED BY FITTERS FOR **EASY INSTALLATION**



Important Information

The following instructions are for installing the Cheshire Mouldings **Flexi Panels**.

These can be installed on flat or convex curved surfaces.

If you have any queries, please contact our technical helpline on **0800 085 3475**.

For the use of MDF panelling, we advise:

Wherever possible, the cutting of MDF panelling should be performed outside and on a dry day, wearing a dust mask and safety glasses.

The use of a dust mask and safety glasses when sanding MDF panelling and ensure that the area you are working in is well ventilated.

Use a vacuum cleaner to remove any dust and wipe down the area with a damp cloth.

Seal/paint the MDF to lock in the dust.







Please note:

All components should be inspected BEFORE installation commences for any damage, as Cheshire Mouldings cannot be held responsible for any damage caused during installation.

We do not recommend the use of a sharp blade to open the packaging as this may damage the product.

Tools required:

Tape measure, pencil, adhesive, nail gun, saw, spirit level, decorators caulk, filler.

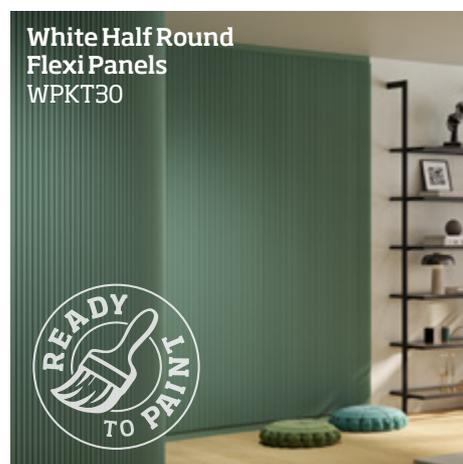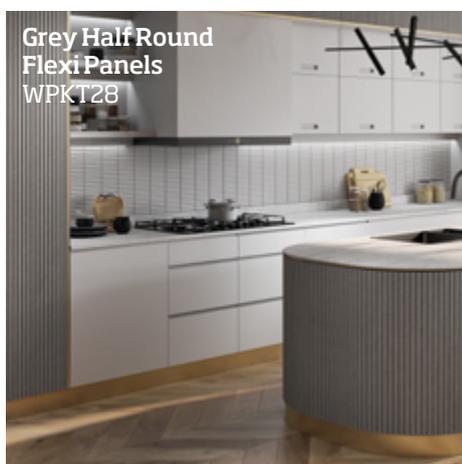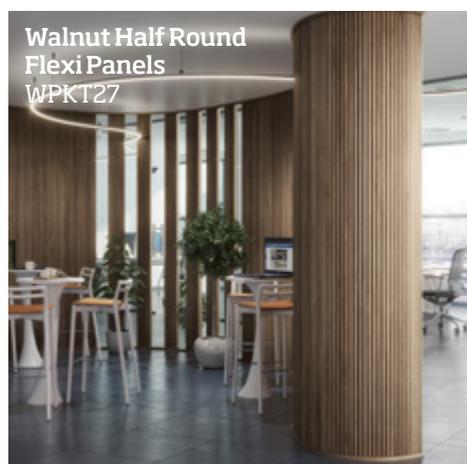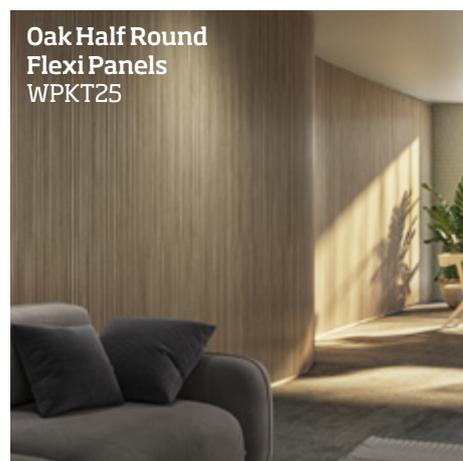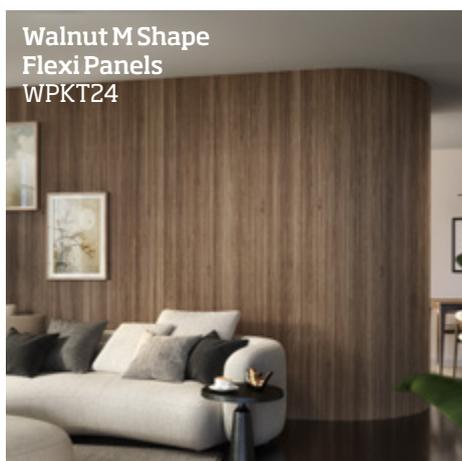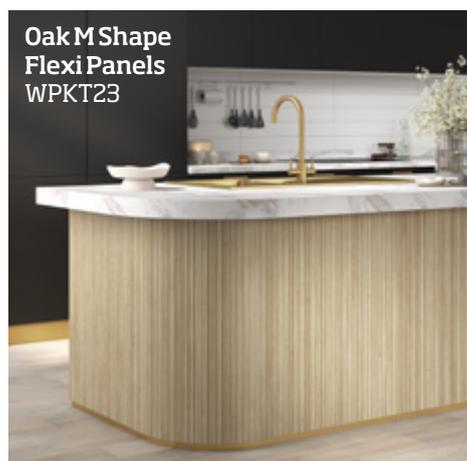

Direct to Wall

To determine how many panels across you require, measure wall length and divide this by the 300mm (panel width) then round up to next whole number (**Fig 1**).

Measure up from top of skirting and mark your preferred panelling height (**Fig 2**). Mark horizontal line across as a guide. For full height installs measure to ceiling.

Mark preferred height onto panels and cut to length (**Fig 3**). Apply adhesive to back face, around the sides and a swirl down the middle (**Fig 4**).

Starting from left hand side offer first panel into position and press the top, middle and bottom of the panel to ensure the adhesive is in full contact with wall.

Check vertical using spirit level (**Fig 5**).

Repeat procedure for remaining panels until you come to the last one. Chances are you are going to need to cut the last panel to fit. Measure remaining gap at top and bottom in case the wall is slightly out. Transfer measurements to panel and cut (**Fig 6**).

Check the fit of the last panel in the gap. Remove, then apply adhesive to the back of the panel then press back into position (**Fig 7**).

Each flexi panel finish has a corresponding flexi panel cover trim which sits over the top edges of the panels. Simply measure and cut trims to length. Apply adhesive to back face of trim (**Fig 8**).

Fig.1

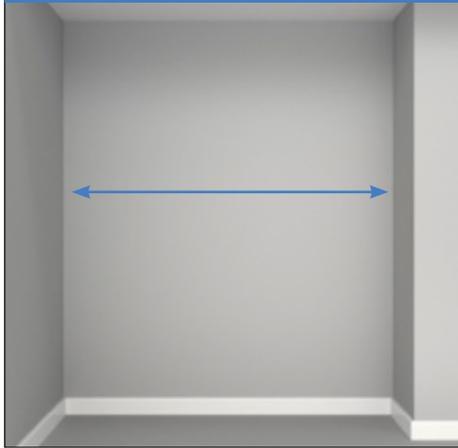


Fig.2

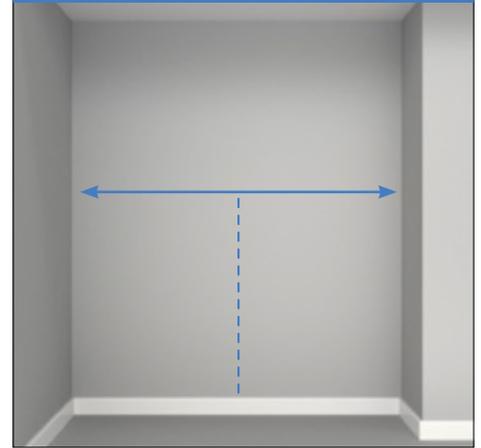


Fig.3

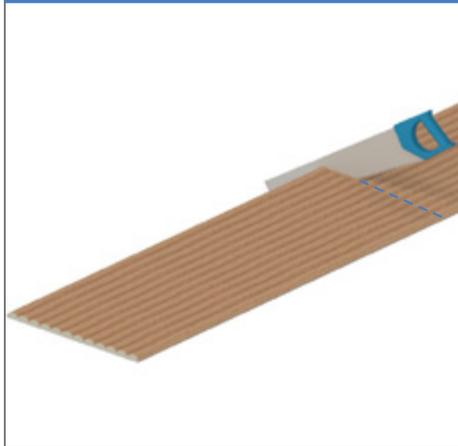


Fig.4



Fig.5

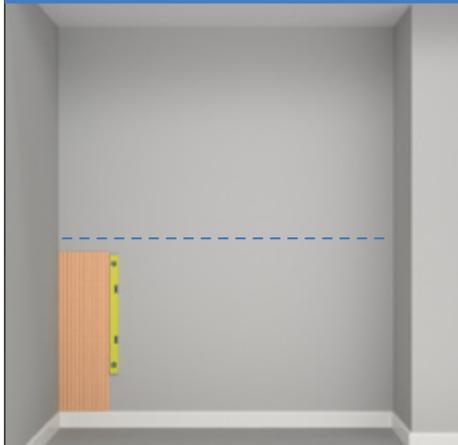


Fig.6


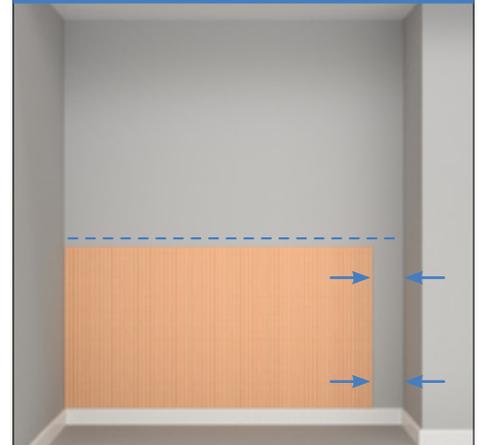


Fig.7



Fig.8

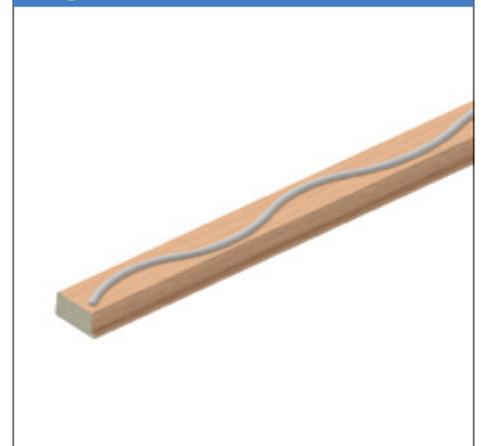

Offer the trim to the wall so the rebate sits on top of the panel tops. Press along trim length to allow the adhesive get good coverage (**Fig 9**).


The Flexi Panels are also suitable for convex curved surfaces like walls, cabinets, furniture & columns (**Fig 10**).

When applying to convex surfaces, apply adhesive to the back of the panel and the surface to be installed to.

Depending on the radius of the curved surface, it may be necessary to also pin to hold in place.


Always dry fit a panel first to check fit when working on curved surfaces.

Please note - the decorative trims cannot be used when panels are used on curved surfaces.

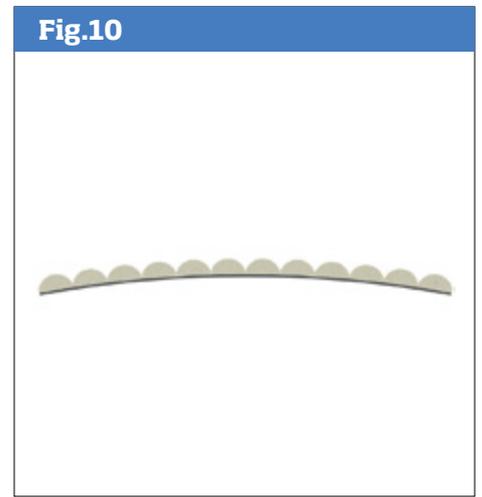

Download our Interactive **Wall Panel Collection Brochure**

Includes lots of new **Clickable content**

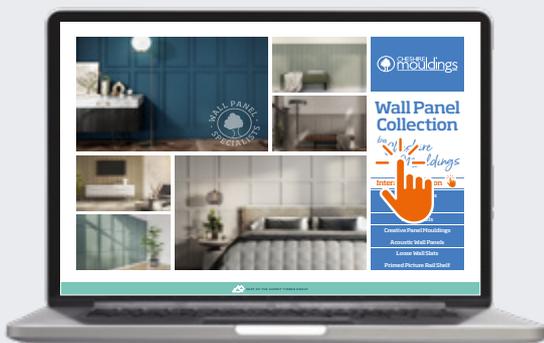

Sign up for our **New Trade App**



Check out our huge **PRODUCT RANGE**

We supply more than you think



www.cheshiremouldings.co.uk



Technical Helpline:
Freephone
0800 085 3475

